


Product Manual

Smart Toilet

■ Model : E6

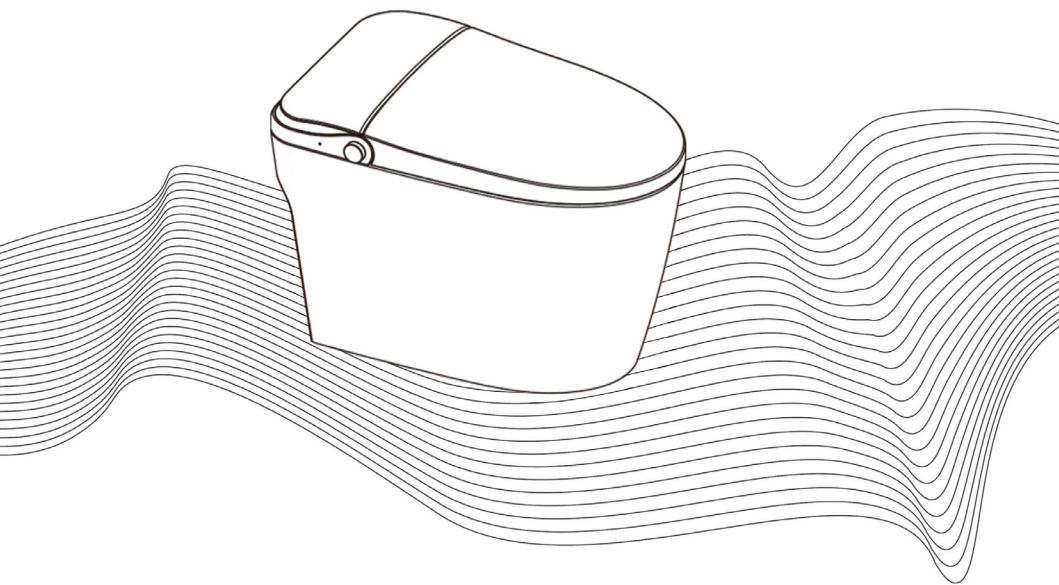

Note: Prior to operation, commissioning, and use, please carefully read this manual and strictly comply with the warnings and regulations specified therein.

Directory

Safety guidelines	01
Warning	03
Parts instructions	07
List of products and accessories	08
Installation precautions	09
Installation instructions	10
Remote control instructions	18
Side button instructions	20
Special function descriptions	21
Maintenance	23
Trouble shooting	24
Product specification	25
Warranty & support	29

Thank you for choosing our smart toilet.

Please read this manual carefully and follow its instructions correctly.

After reading, keep the manual in a convenient location for future reference.

Important safety guidelines

Remarks: Instructions for details installation, use, clean and maintenance of this product are provided by the manufacturer; only necessary warning sentences required by standards are listed as below. The French manual should be provided by manufacturer if the products shipped to Canada.

IMPORTANT SAFEGUARDS

When using electrical products ,especially when children are present , basic safety precautions should always be followed , including the following

Press the TEST button(the RESET button) every month to assure proper operation

READ ALL INSTRUCTIONS BEFORE USING



DANGER - To reduce the risk of electrocution

- 1.Do not use while bathing
- 2.Do not place or store product where it can fall or be pulled into a tub or sink
- 3.Do not place in or drop into water or other liquid
- 4.Do not reach for a product that has fallen into water . Unplug immediately



WARNING- To reduce the risk of burns , electrocution ,fire or injury to persons

1. Close supervision is necessary when this product is used by ,on ,or near children or invalids
2. Use this product only for its intended use as described in this manual . Do not use attachments not recommended by the manufacturer.
3. Never operate this product if it has a damaged cord or plug , if it is not working properly , if it has been dropped or damaged , or dropped into water . Return the product to a service center for examination and repair .
4. Keep the cord away from heated surfaces
5. Never block the air openings of the product or place it on a soft surface , such as a bed or couch ,where the air openings may be blocked. Keep the air openings free of lint, hair , and the like.
6. Never use while sleeping or drowsy
7. Never drop or insert any object into any opening or hose
8. Do not use outdoors or operate where aerosol(spray)products are being used or where oxygen is being administered
9. Connect this product to a properly grounded outlet only . See grounding Instructions
- 10.Do not use while bathing
- 11.Risk of Electric shock. Connect only to a grounding type receptacle protected by a ground-fault circuit-interrupter(GFCI)
- 12.CAUTION- Risk of electric shock , do not remove cover (or back).Refer servicing to qualified service personnel .

Important safety guidelines

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS

This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. This plug must be plugged into an outlet that is properly installed and grounded.




DANGER-Improper use of the grounding plug can result in a risk of electric shock

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

This product is for use on a nominal 110 V circuit, and has a grounding plug that looks like the plug illustrated in sketch A in below Grounding methods. A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear, lug, and the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

Grounding methods

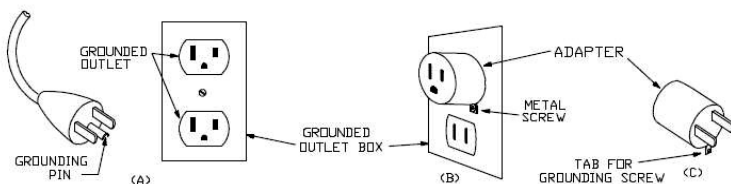

AA200

Safety Precautions

Please read and use it correctly.
The precautions listed here are important for safety purposes.

Explanation of Terms and Symbols



Warning : It means that if you ignore this sign and misuse it, it may cause serious injury or death.



Notice : It means that if you ignore this sign and misuse it, it may cause personal injury or property damage.



It means not feasible and prohibited.
(The picture on the left indicates that disassembly is prohibited)



It indicates that the content must be followed.
(The picture on the left indicates that it must be followed)



Warnings



Do not
splash water

Do not splash water or detergent on the product body or power plug.

- It may cause fire or electric shock.
- It may cause crack or damage to the bidet or indoor seepage.

This is an electrical product, so please do not install it in a place where it is easily get wet by water or in a high humidity. When using it in the bathroom, please install a ventilator or vent to ensure good air circulation in the bathroom.

Please set the socket for power wiring as follows.

The lists below are the following requirement to avoid fire or electric shock.

- Use a high-sensitivity, fast-type leakage switch (rated induction current below 15mA) or an insulated transformer (above 1.5KVA and below 3KVA) for protection.
- The installation position of the socket must be more than 0.3m above the ground, and as far as possible from the bathtub.



This product needs to be properly earthed.

If it is not earthed, it may cause electric shock.

Note: The earthing treatment mentioned here refers to the earthing resistance below 100Ω, and the grounding wire of the switchboard uses a copper wire with a diameter of 1.6mm or more.

When using in the bathroom

Please confirm that the power plug is waterproofed with Silica Gel.

- It may cause fire or electric shock.

Warnings



Prohibited to
use in wet area

Do not install this product in a wet place such as a shower room.
•It can cause fire or electric shock.



Do not
disassembly

Absolute do not privately
dismantle, repair or modify
products.



Do not use
wet hands

Do not plug or unplug the
power plug with wet
hands.



Forbid

Do not continue to use when
the product fails. When the
following occurs, please
pull out the power plug,
close the water inlet angle
valve and stop the water inlet.

Bidet is leaking
The product has cracks
Have abnormal sounds and odor
are present
Toilet clogged
Product smoking
The product is abnormally hot



Forbid

Please don't damage power
cable or then conjunction line.

The words that take no cognizance
product damage to still continue to
use, may arouse a fire, get an
electric shock, short circuit.

If the power cable damages
and need is carried on by
the professional to maintain.



Forbid

Do not use a loose and
unstable power outlet.



Forbid

Do not use water sources
other than tap water.



Forbid

Do not use power source
other than AC 220-240V.

Attention



Pay attention to high temperature burns

Sitting on the bidet for a long time, please
adjust the temperature of the bidet to a low
temperature or turn off

For users referenced on the right who use
the insulated bidet with warm air drying,
please set the bidet temperature to the
normal position and adjust the warm air
temperature to the low setting.

- Children and elderly person who cannot
adjust the temperature to suitable
by themselves
- People with limited mobility such as
patients and disabled people.
- Those who have taken mild sleep
medications (e.g., sleeping pills,
cold medicines)
- Drowsy individuals due to heavy drinking
- People experiencing excessive fatigue

Warnings



Smoking
prohibited

Do not allow cigarettes and other fires to approach the product.
•It can cause fire.



Forbid

Do not put or block the warm air outlet with your fingers or other objects.
Do not block warm air outlet with your hands.
Do not cover the warm air outlet with clothing.



Forbid

Please do not apply strong force or impact,
Do not stand on the bidet, seat cover and water closet,
do not place heavy objects.



Forbid

Please use diluted kitchen detergent (neutral) for maintenance,
do not use the following products:

Toilet detergents, Residential detergents, Gasoline, rosin, Cleanser powder,
Nylon brushes, etc.

- May damage the plastic, deform and crack and cause personal injury.
- May damage the water pipe and cause water leakage.




Forbid

With the inlet angle valve open
do not remove the drain plug.
•May cause water leakage.



Forbid

Do not twist and damage the
water inlet hose.

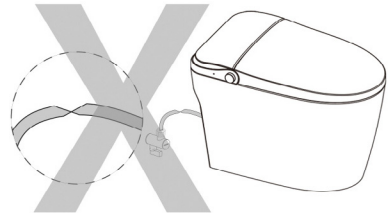

Forbid

Do not pour other things
and flush.
•Otherwise it may cause the
water closet to block and sewage
overflow.



Obey

When not using for a long time,
please pull out the power plug.
•For safety reasons, please pull
out the power plug.
•When used again, corrosive water
can cause dermatitis, please use it
after passing the water again.



Obey

When water leakage occurs,
close the water inlet angle
valve to stop water inlet.



Obey

Prevent damage caused
by freezing.

Please keep warm and increase
the temperature of the toilet room.

Warnings

Insert the power cord plug



Obey

Before use, please confirm that the power cord plug is inserted, the plug and the socket are closely attached, there must be no looseness or incomplete insertion, otherwise, it may cause fire due to heat.

When not using this product for a long time, please unplug the power plug.

When the bidet is clogged, please pull out the power plug and use a commercially available pipe dredge to clear the clogging.



Obey

•If the power plug is not pulled out, automatic washing will be carried out, which may cause overflow of sewage and indoor flooding.

Do not expose the product to direct sunlight




Forbid

•It is easy to discolor, aging or crack the product.



Obey

Please use the attached hose

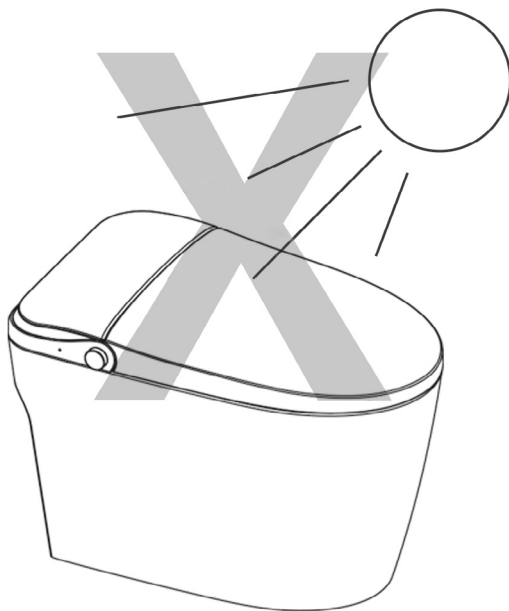

Installation

Tools required for installation

Required tools for installation. Please have these tools prepared prior to installation.



Drill
(Dia. 0.24in)



Knife



Marking pen



AAA battery x2
(for the remote control)



AA battery x10
(for the battery box)



0.91 - 0.98 in
(Spanner model
varies for different pipes)



✚ screw driver



 
Measuring tape

Item list


Confirm that all below items are inside the box



Intelligent toilet X1



 Remote controller set X1
(Without battery)




T-valve X1




Wax ring X1



 Backup battery box X1
(Without battery)



Filter

 

Product manual

Floor flange X1



✚ Bolt X2

• Washer X8

⌋ Hexagon bolt X4




Mounting bracket X2

⌋ Bolt X2

- Please confirm all the aforementioned items are inside the package.
If there are any omissions, please contact our customer service.
- Illustrations above are for references only, Actual objects may look different in person.

Before you Install

Confirm dimensions of product with installation space

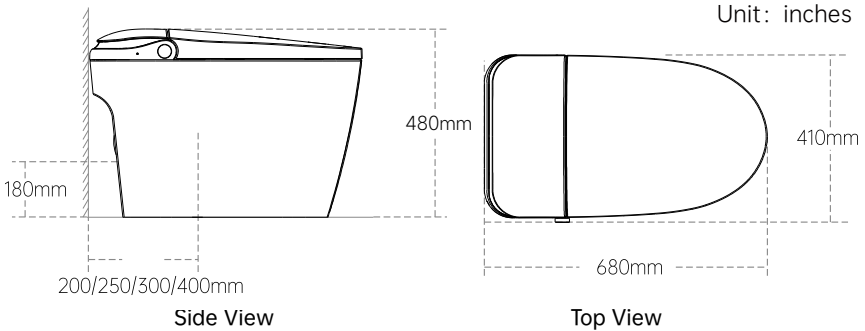


1. Confirm dimensions of product with installation space.
2. Check your installation conditions. (water supply, water pressure, electrical circuit)
3. Pay attention to other objects.
 - Other objects (door, cabinet, etc) may affect the installation or sensing functions.

Confirm dimensions of power plug and water hose

The length of the power cord is 59in.
Make sure the power supply is within reach.

The length of the clean water hose is 31.49in.
The length of the flush water hose is 23.6in.
Make sure the water outlet is within reach.

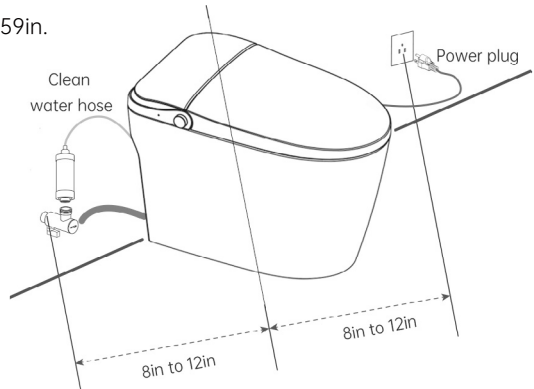


Installing

Install your unit using the following steps.

1 Open the box right side up

Remove the accessories first, then remove the unit from the top, as shown in the diagrams below.

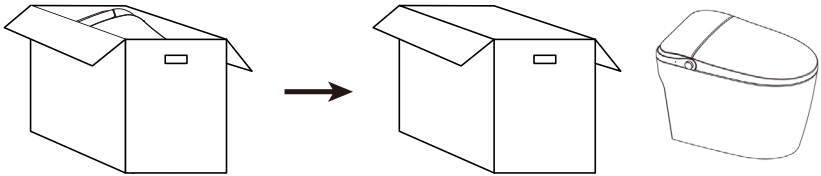


2 Mark your drainage hole with a cross

1. Align the flange with the drain hole, and mark the positions of the four mounting holes of the flange on the ground with a marking pen.

2. Place the toilet on the ground with aligning the ground drain hole, place two fixing blocks in the openings on the left and right sides of the toilet bottom, mark the screw mounting hole positions of the fixing block with a marking pen, and then remove the toilet.

Bolt mounting holes of flange

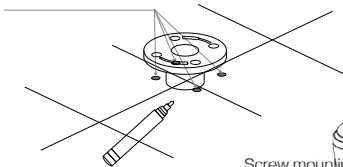


Screw mounting holes of fixing block



Screw mounting holes of fixing block



Screw mounting holes of fixing block

Openings of ceramic bottom

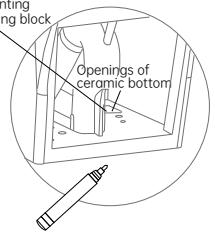

3 1. Put the flange on the drain hole, and fix it on the ground with four bolts. Then Seal the flange with glass glue.


2. Place the fixing block on the installation position marked by the line drawing pen and fasten it with two bolts.

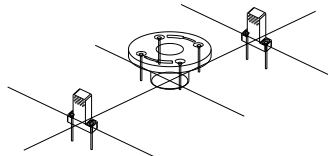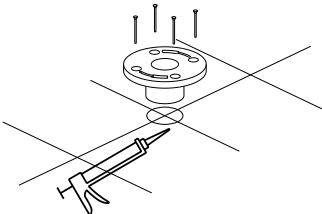


Installing

4 Install the ceramic body, water supply hose, T-valve


1. Place the wax ring on the drain hole at the bottom of the ceramic.

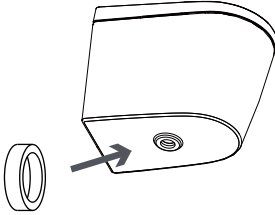


2. Align the ceramic drain with the drain hole on the ground, and press down to make the wax ring fully contact with the ground.

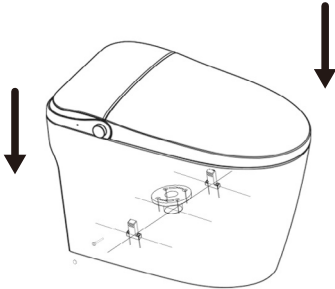


3. Fix the two sides of the ceramic with two bolts, and finally install the cap.

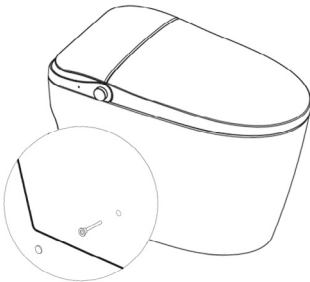


4. Attach the flush water hose to the T-valve and tighten.

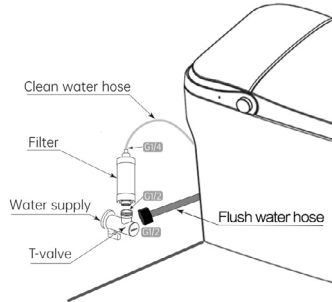

5. Attach the filter and clean water hose to the T-valve and tighten.

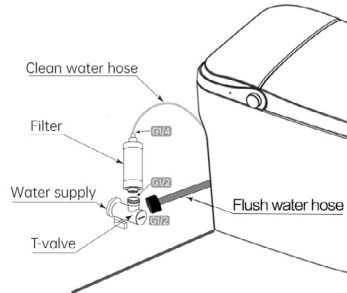

6. Open the main valve to empty sewage, until clear. Connect the T-valve to the water supply and tighten. Use gasket to prevent water leakage.

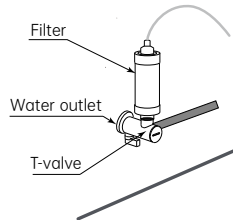

7. Finish installation.


Installing

5 Installing the remote

1. Tear off the adhesive film behind the remote control holder.
2. Secure the holder to the wall.
3. Remove the battery cover from the backside of the remote to install batteries.
4. Pair the remote control with the toilet
5. Once finished, remote is ready to be placed in its holder.

Detailed steps shown in the diagram below:

- The remote control holder should be installed away from the bidet's spray trajectory.
- The remote control holder should be installed within reach when seated on unit.
- Make sure there is nothing to block the transmission between the toilet and its remote.

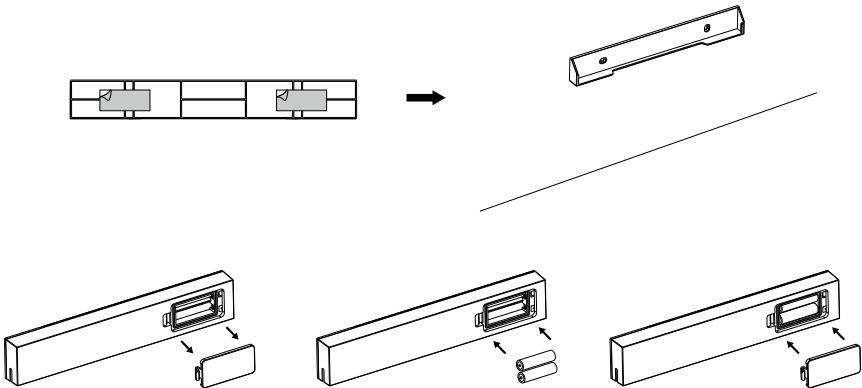


Installing

6 Installing and using the battery box

- 1.Remove the battery cover by unscrewing the screw with acrosshead screwdriver;
- 2.Add the new battery, shut the battery cover, and tighten the screw with a crosshead screwdriver;
- 3.Only connect the battery to the connecting wire during power outages;
- 4.Press the knob on the side of the toilet to flush


- Please confirm the battery's positive and negative poles.
- Please do not charge, disassemble, fire the battery, or mix with used batteries or different kinds of batteries to avoid liquid leakage or explosion.
- The battery box has a moisture-proof function. Please ensure that the set screws are screwed in place to achieve a good seal effect.
- **Connecting the battery during normal power supply may cause the toilet to be unusable.**

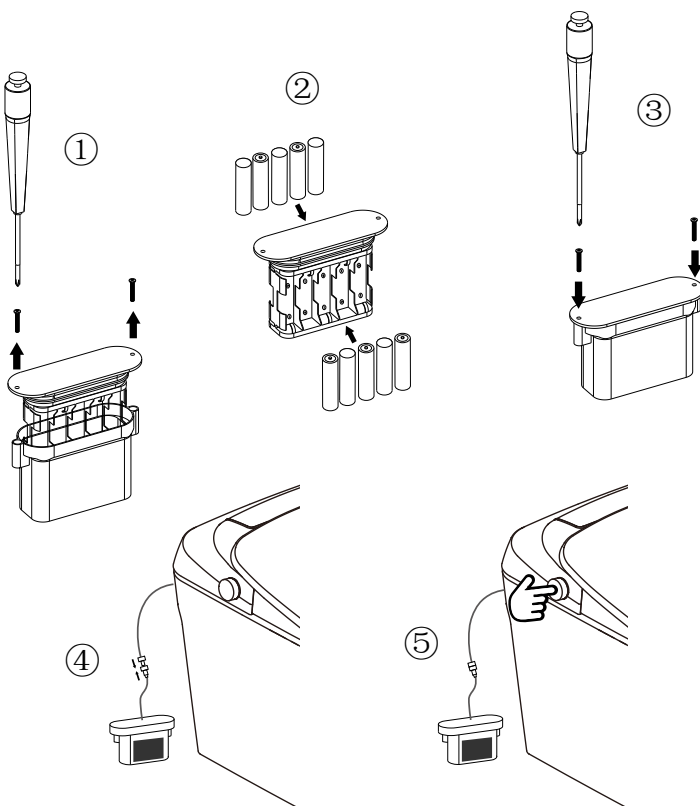

Installing

7 Testing water flow

1. Open the T-valve to maximum as shown in the figure.

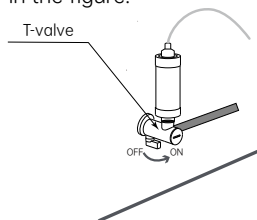


2. Confirm various connecting parts are not waterleaking

- In case of water leaking, unfasten the nuts again and install them again.

8 Connecting power

1. Connect to the grounding.
2. Plug in AC 110V power plug.

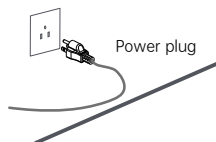

3. Check to see if the power is on.

- (1) Check to see if the power light is on.
If not, push the reset button.

- (2) Once the power light is on, the toilet will run its initial diagnostic: lights will turn on, cleaning nozzle will extend, the motor will begin to run and water will run through the system.

9 Remote control pairing

When the product leaves the factory, the remote control and the product are connected, if the remote control went failure, please re-connect the code as following methods.

①



TEST

Push the **TEST** button on the plug to shut off power supply

 
②



RESET

Push the **RESET** button on the plug to turn on the smart toilet, wait till you hear "Di"

③

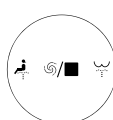

Then you turn the knob switch counterclockwise for 3-5 seconds, when you hear "Di", quickly press any button on the remote control for pairing.

10 Testing the product (Checking the side knob and remote control)

1. Are all the functions working properly?


Posterior Wash, Front Wash (Including water pressure & nozzle position adjustment), Heated Dryer, Water & Seat temperature Adjustment, Nozzle cleaning, remote control.

All functions listed above should be tested.

2. Checking posterior wash

Place hand on sensor point (shown in illustration on right), Activate the posterior function on the side knob or the wireless remote.

Use hand to block nozzle spray.

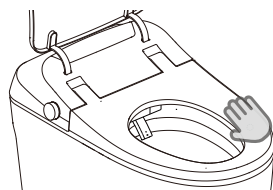

Remote control instructions



How to use the remote control



Full Flush

Press this button to flush.



Half Flush

Press this button to flush with a smaller amount of water.



Hip

Press this button when you are seated, the rear wash cleaning nozzle will spray for 2 minutes, during this time, press the button again to start or stop the oscillate, and then stop spraying automatically.



Female

Press this button when you are seated, the front wash cleaning nozzle for female will spray for 2 minutes, during this time, press the button again to start or stop the oscillate, and then stop spraying automatically.



Dryer

Press this button to start drying when you are seated. During this time, press the button again to start or stop the oscillate, warm air drying will stop automatically after 4 minutes.



Child

Press this button to start child's wash with lower temperature and lower water pressure. Security measures: not adjustable for all cleansing parameters.



Cover

Press this button to open/close the lid.



Seat

Press this button to open/close the seat ring.



Water Temp

4 degrees can adjust the water temperature when washing.

The temperature can be set as:
Environment Temp., 95°F, 99°F, 103°F



ECO

Turn on or off the ECO (Economical) mode, which is for saving energy of turning off the heated seat.

Remote control instructions



Seat Temp

4 degrees can adjust the seat temperature.

The tempature can be set as:

Environment Temp., 95°F, 99°F, 103°F



Massage

Turn on/off the automatic water or pressure big and small alternatively for creating a water massage feeling



Air Temp

4 degrees can adjust the air temperature when drying.

The temperature can be set as:

The environment temp., 113°F, 122°F, 131°F



Auto Temp

Turn on or off the automatic temperature adjustment mode which automatically adjusts three temperatures according to the environment



Light

The night light can be turned on or off in the power-on state.



Sterilization

Press this button to open/close the UV sterilization for 30s after closing the cover



Stop

Under the washing mode and drying mode, press it for short time to stop the running function.



Cleaning position


4 positions can be chosen when washing.



Cleaning pressure

4 water pressure can be chosen when washing.

Side Button instructions

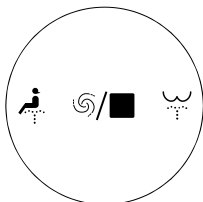

Flush/Stop function

Long-press the knob while seated to activate warm air drying.

Long-press the knob when not seated to turn the unit off.

Female wash/Moving function

Rotate the knob counterclockwise to activate the female wash.

Rotate it again to activate the moving wash function.

Hip wash/Moving function

Rotate the knob clockwise to activate hip wash.


Rotate it again to activate the moving wash function.

Special Function Description

Auto Open&Close

if a person approaches the induction location , the seat cover will automatically open. When people leaves the body sensor area for 2 mins, the seat cover will automatically close.

- Press the "**Hip**" button on remote control for 5 seconds to turn it on or off.

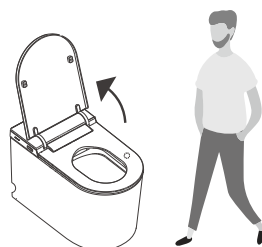

Auto Pre-wetting



Once the seat sensor detects a user, it will release a small amount of water to moisten the ceramic inner wall, thus preventing adhesion.

- Press the "**Water Temp**" button on remote control for 5 seconds to turn it on or off.

Foot Sensor

When the right foot is close to the foot sensor, the toilet will open the seat cover / open the seat ring. / close the cover and flush

- Press the "**Ring**" button on remote control for 5 seconds to turn it on or off.

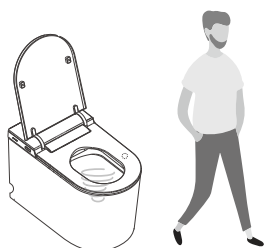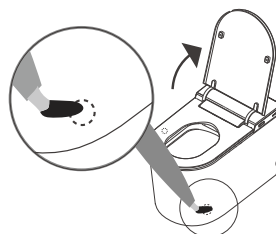

Auto Flush

When the seat sensor no longer (10s) detects a user, it will automatically flush once .



- Press the "**Strong Flush**" button on remote control for 5 seconds to turn it on or off

Special Function Description

Energy-efficient mode

When the seat temperature is set to 35°C/37°C/39°C:
The seat maintains a temperature of approximately 30°C when unoccupied, and warms up to the set level only when a user is seated.

- Press and hold **"Light"** button on remote control for 5 seconds to turn it on or off

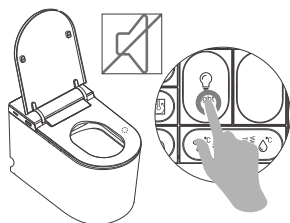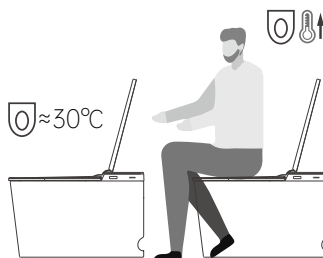

Silent mode

When the remote control is pressed, the toilet will no longer make feedback sounds to keep silent at night.

- Press the **"Dryer"** button on remote control for 5 seconds to turn it on or off.

Maintenance

Regular maintenance is required to ensure normal use





Electric
Product

- Be careful not to let water seep inside or leave detergent in the gap between the top unit and bowl unit. (May damage plastic parts or cause a malfunction.)
- Keep the Seat Sensing Area clean, never cover it with seat sheath or other things.
- Cut off the power and water supply before maintenance.
- Direct water wash to entire product is prohibited.

Maintenance of product surface and ceramics

- Unplug the power plug from the outlet before cleaning.
- Wipe with a soft cloth that has been soaked in water and wrung-out thoroughly.
- For heavy dirt: Wipe with a soft cloth soaked in diluted, neutral kitchen detergent, and then wipe with a soft cloth soaked in water.
- Wipe off any cleaner that remains on the product.
- Wipe off all water that remains on the product to prevent water seep inside.
- For cleaning or maintenance of plastic parts, do not use any harsh cleaning agents. (These include, but are not limited to products such as: concentrated sulfuric acid, concentrated nitric acid, glacial acetic acid, carbon tetrachloride, chloroform, acetone, butanone, benzene, methylbenzene, phenol, methylphenol, dimethylformamide, methyl ether, soybean oil, acetate, 40% nitric acid, thick salt acid, 95% alcohol, gasoline, kerosene or brake oil, etc).

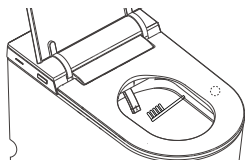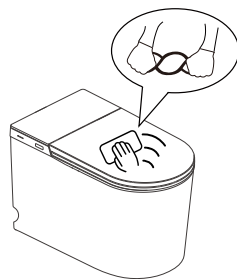

Maintenance of nozzle

1. When unseated, press Nozzle Self-Cleaning button on the Remote Control.
Enter "Nozzle Self-Cleaning", the nozzle extends and water sprays out for cleaning.
2. Wipe with a soft toothbrush.
 - Do not pull, push or press the nozzle with excessive force.
 - Do not use any acid detergent.
3. Press Stop button to finish
 - The nozzle retracts.

Others

- To prevent breaking, please empty water from the tank when not using the product for a long time.
- Before connecting the product to the water supply and electrical outlet, allow it to defrost for 30 mins in a warm indoor environment.
- In case of freezing, unable to flush or wash, the cloth soaked in hot water can be covered on the water supply hose of the toilet or the connection part of the water supply hose to defrost it. (Do not pour hot water or blow hot air with high temperature on the product body, water supply hose and other objects).
- The shutoff valve should be cleaned every 6 months.

Troubleshooting

If the user should run into any issues, please consult the troubleshooting guide below.

If problem persists, please contact a professional.

Power

Symptoms	Possible Causes	Please check
Toilet doesn't working	Power failure	Wait until the power is restored
	Plug not connected or no power to socket	Plug in or detect the socket
	The leakage circuit breaker on plug does not reset	Press "Reset" button on the plug
	Product is on standby mode	Press and hold "STOP" button at the remote control

Dryer

Symptoms	Possible Causes	Please check
Dryer fan stops in operation process	The dryer fan stops automatically after continuous usage for 4min	If necessary, press the dryer button again
	The seat is unable to sense human body	Adjust your sitting gesture or sit on the toilet again
The air is not warm	Air temp set too low	Set air temperature to proper level

Troubleshooting

Wash/Clean

Symptoms	Possible Causes	Please check
Wash mode is abnormal	Not yet seated or current sitting posture unable to be sensed by the seat	Seated or adjust your sitting gesture
	Tee valve for water supply is closed or not opened completely	Fully open the tee valve for water supply
	Insufficient water pressure	Check bend problem on inlet hose, if so, adjust hose
The wash mode stops in the middle of use	Wash mode stops automatically after continuous flushing for 120s	If necessary, turn on the wash mode again
	The seat is unable to sense human body	Adjust your sitting gesture or sit on the toilet again
The water is not warm	Water temp set too low	Water air temperature to proper level

Heated Seat

Symptoms	Possible Causes	Please check
The seat is not warm	Seat temp set too low or turn on ECO mode	Set seat temperature to proper level

Troubleshooting

Remote controller

Symptoms	Possible Causes	Please check
Remote control fails	Check if the battery of the remote control is too low	Please replace the battery
	Check if the remote control has been paired	Re-pair the remote control according to "Remote Control Instructions"

Flush

Symptoms	Possible Causes	Please check
Toilet fails to flush	Water failure	Wait until the water supply is restored
	Angle valve for water supply is closed	Open the angle valve for water supply
	Auto-flushing is deactivated	Press and hold "FLUSH" button at the remote control
When the water pressure is normal, but can't be washed and flush.	Sewage is leaking	Ask a professional to perform maintenance
	The sewage pipe is clogged	Please purchase a plug in the local market for dredging

Specifications

Product name		Smart Toilet
Product model		E6
Lid/Seat open and close		Auto
Product configuration		Rear clean,front clean,foot sensing flushing,power saving mode,pre-flushing, dryer, night light
Rated voltage		110V-
Rated frequency		60Hz
Rated power		1300W (When inlet water temp in 59°F)
Power cord length		Appx3feet
Water Inlet	Minimum Pressure	35psi, ensuring a flow of water at least 3.7GPM
	Maximum pressure	80psi, ensuring a flow of water at least 3.7GPM
Toilet	Nominal water consumption	1.28gpf/4.8lpf
	Flush method	Siphonic tornado flush
	Rough-in	Rough-in 12in
Cleaning	Heating type	Instant heating
	Washing temp range	OFF/34°C-40°C (OFF/93°F-102°F)(4 levels)
	Position adjustment	3-level adjustment(long, medium, short)
	Water pressure adjustment	weak, medium, strong, strongest
	Safety device	Butterfly thermostat, thermal fuse, flow sensor, leakage protection plug, watertemperature sensor
Heated seat	Heat temp range	OFF/34°C -40°C (OFF/93°F-102°F (4 levels)
	Safety device	Seat occupied sensor,temperature sensor,temperature fuse,temperature controller, leakageprotection plug
Dryer	Dryer temperature	4-level adjustment : room temperature, 35°C(95°F), 45°C(113°F), 55°C(131°F)
	Dryer air speed	>4m/s
	Safety device	Thermal fuse, leakage protetion plug, temperature sensor
Sensor for open/close seat cover		Foot-kick button
Classi fication of waterproof		IPX4
Ambient temperature		0-40°C
Product size (mm)		680x410x480
Product weight (kg)		About 43
Bacteriostat parts		Toilet seat, nozzle
Color		White

Warranty & Support

This warranty covers defects in materials and workmanship under normal use.

The warranty does not cover damage resulting from accident, misuse, improper installation, neglect, or use not in accordance with the product instructions. Consumable parts and cosmetic damage are also excluded.

Please retain your proof of purchase, as it will be required for any warranty service. For support, please contact your original point of purchase or the authorized retailer where you purchased the product.


Your statutory rights under the American and Canadian Consumer Law are not excluded by this warranty.

TEL:4009204219

Thank you for your purchase! We offer a one-stop service model that can assist with any after-sales issues. If you have any issues, you may reach us by calling us, and we will provide you with suitable answers.



According (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

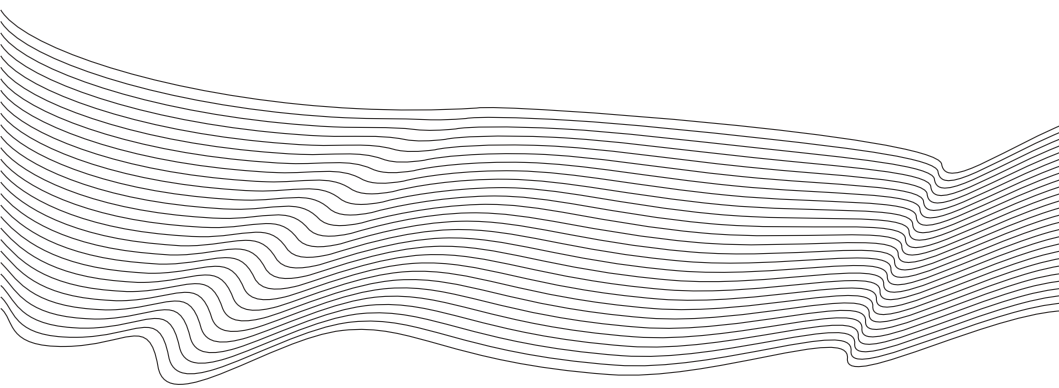

Data in this manual carefully check, and strive to accurate, if you have any printing error,may produce error, so the company is not undertaken the consequences.Printing process can make products have slight difference with real data, due to the time of data printing, product specifications may change slightly when buy in kind shall prevail.